



UNI FAN TL LCD Firmware Manual Update Guide

20231222



[中文版指南点这里](#)

Please update TL LCD firmware if you are encountering JPG file or rotation function unable to memory.



Before following this guide, ensure you have updated the controller firmware (refer to the guide) and downloaded the latest L Connect 3 v2.X.X.

- Make sure that the system is connected to internet
- Update one TL controller at a time, supporting 7 x TL LCD.



1. Run L-Connect 3, <New version update available> box will appear
2. Click <Update Now> to go to Settings > Update page
3. Click <Download>

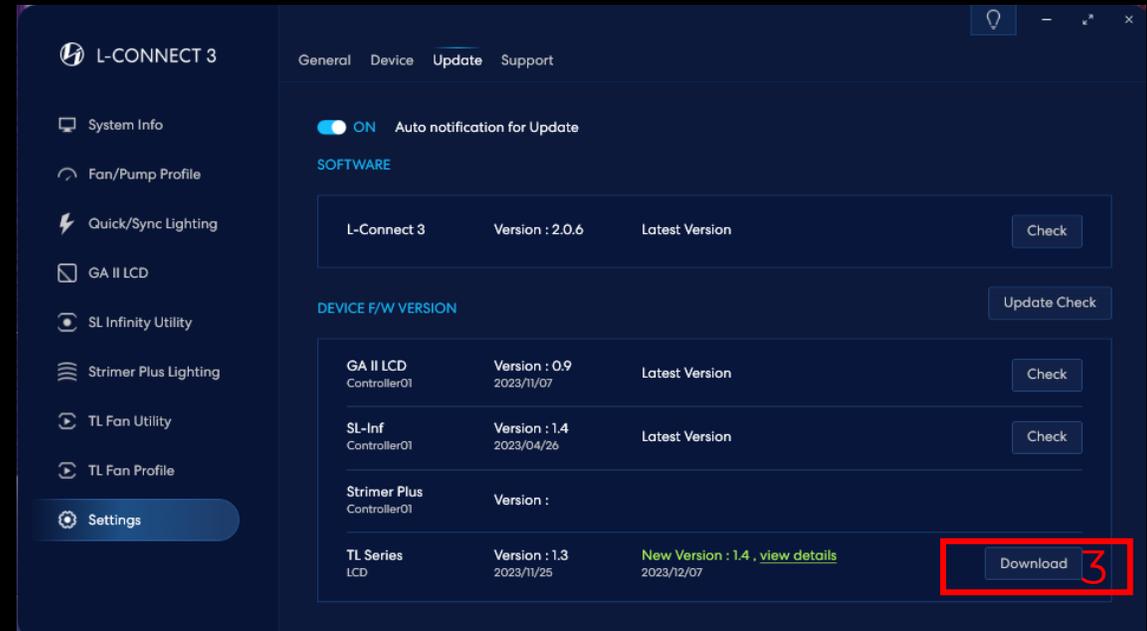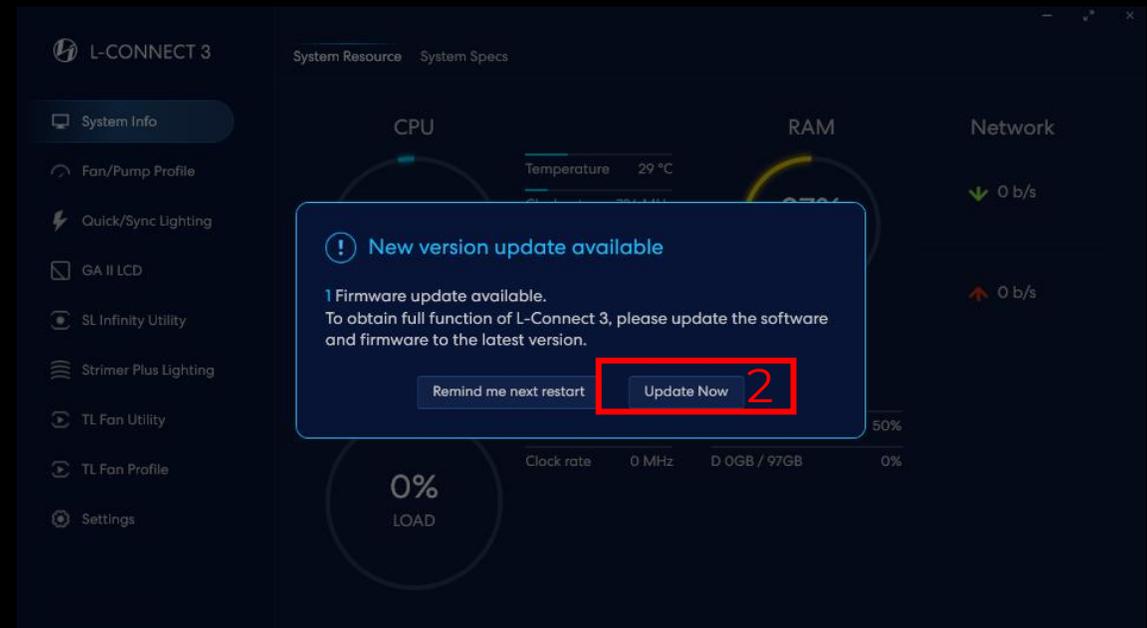

4. Once the download is complete, click <Update>
5. Allow the software to run the update; refrain from taking any action during the upload. (Please ignore the negative value. The more TL LCD fans you connect, the value will go higher)

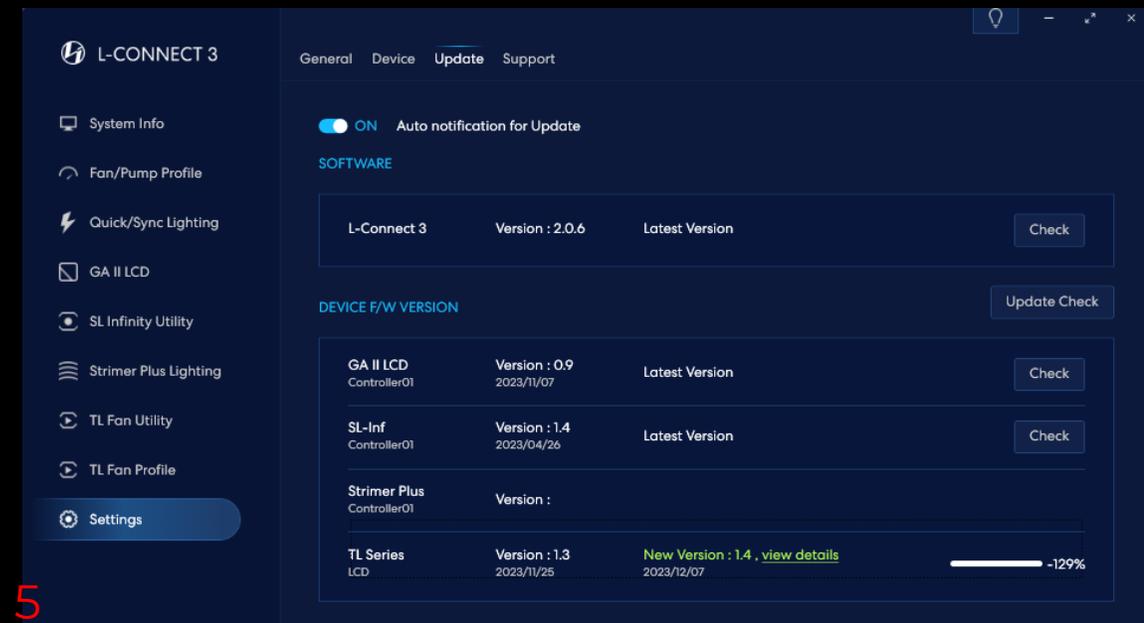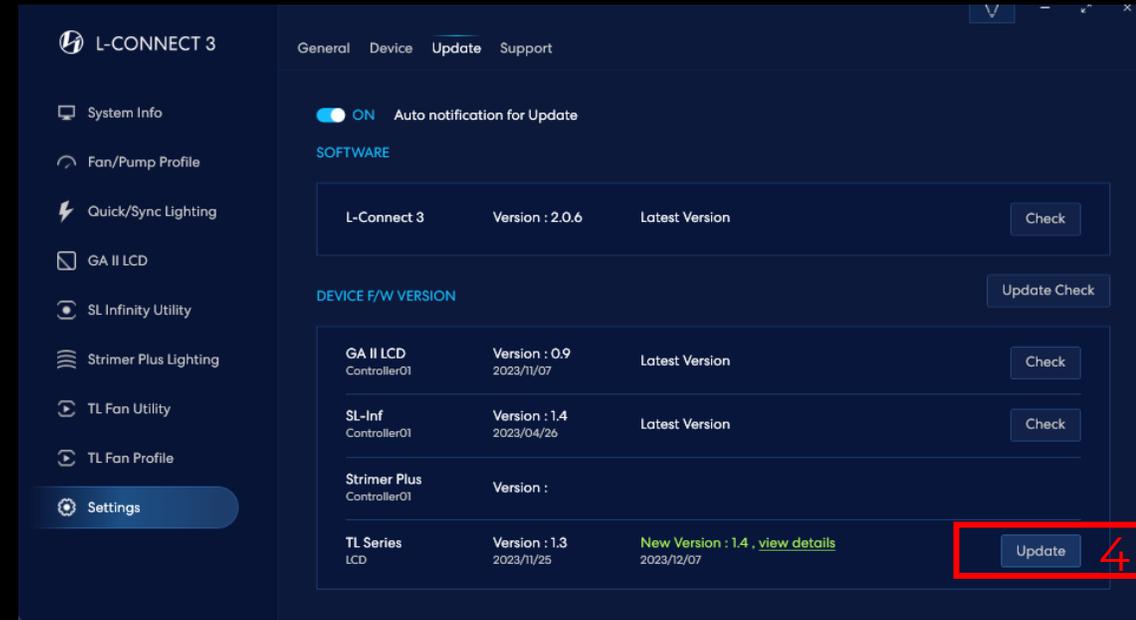

6. When update TL LCD FW is done, a message prompting a PC reboot will appear; click <OK>
7. Before restarting the PC, run L-Connect 3 again to verify that all updates has been applied to v1.4 and update button doesn't appear.
8. If <Update> button is still clickable, repeat step 4.

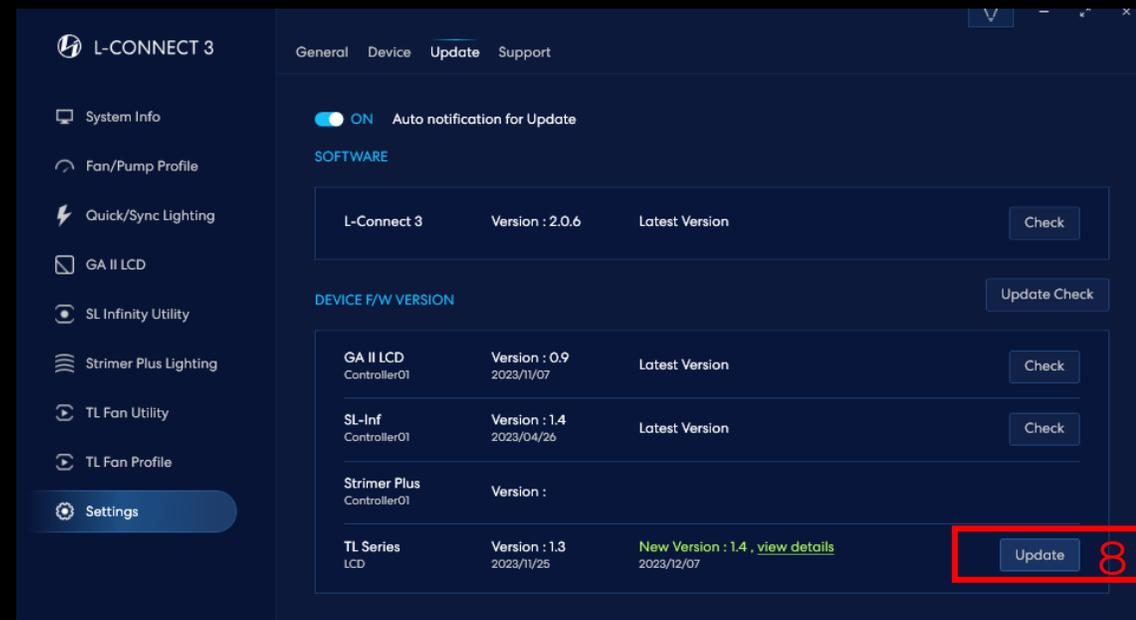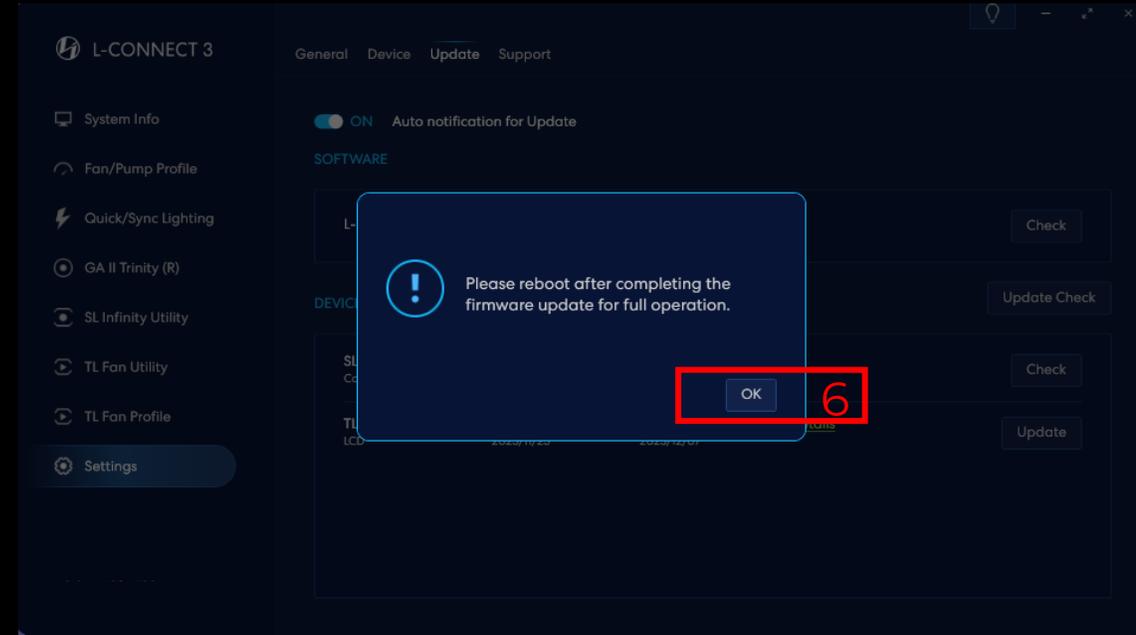

9. Ensure that it displays as Version: 1.4 at Settings > Update > TL Series LCD
10. Restart your PC, and you can now enjoy smooth control of your TL LCD fans with L Connect 3.
11. The <New version update available> box might still appear; please ignore it.

